

North/Latin America Europe/Africa Asia/Oceania Internal Use Only

http://aic.lgservice.com http://eic.lgservice.com http://biz.lgservice.com

# PLASMA TV SERVICE MANUAL


**CHASSIS: PD82A** 

MODEL: 50PG3500

50PG3500-ZA

**CAUTION** 

BEFORE SERVICING THE CHASSIS,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

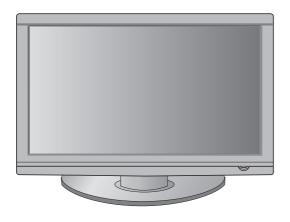

# **CONTENTS**

CONTENTS	2
SAFETY PRECAUTIONS	3
SPECIFICATION	4
ADJUSTMENT INSTRUCTION	7
TROUBLE SHOOTING	16
BLOCK DIAGRAM	24
EXPLODED VIEW	25
SVC. SHEET	
PRINTED CIRCUIT DIAGRAM	

#### SAFETY PRECAUTIONS

#### **IMPORTANT SAFETY NOTICE**

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by  $\triangle$  in the Schematic Diagram and Exploded View.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

#### **General Guidance**

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and it's components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this monitor is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Due to high vacuum and large surface area of picture tube, extreme care should be used in **handling the Picture Tube.**Do not lift the Picture tube by it's Neck.

#### Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1M $\Omega$  and 5.2M $\Omega$ .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer

#### Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

#### Do not use a line Isolation Transformer during this check.


Connect 1.5K/10watt resistor in parallel with a 0.15uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which is corresponds to 0.5mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

#### Leakage Current Hot Check circuit

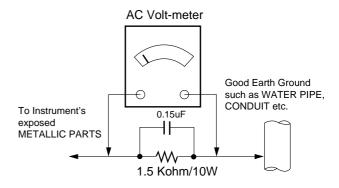

# **SPECIFICATIONS**

NOTE: Specifications and others are subject to change without notice for improvement.

#### Application Range

This spec is applied to the PLASMA TV used PD82A Chassis.

Chassis	Model Name	Market	Brand	Remark
PD82A	50PG6500	France	LG	
	42PG6500			
	50PG4500			
	50PG7500			
	42PG3500			
	50PG3500			
	42PG2500			
	50PG2500			

#### ∨ Specification

Each part is tested as below without special appointment.

- 1) Temperature : 25±5°C (77±9°F), CST : 40±5
- 2) Relative Humidity: 65±10%
- 3) Power Voltage: Standard Input voltage (100-240V~, 50/60Hz)
  - \* Standard Voltage of each product is marked by models.
- 4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with SBOM.
- 5) The receiver must be operated for about 20 minutes prior to the adjustment.

# ∨ Test Method

1) Performance: LGE TV test method followed.

2) Demanded other specification Safety: CE, IEC specification

EMC : CE, IEC

Model	Market	Appliance	Remark
50PG6500 42PG6500 50PG4500 50PG7500 42PG3500 50PG3500 42PG2500 50PG2500	France	Safety: IEC/EN60065 EMI: EN55013 EMS: EN55020	TEST

# **V** Module General Specification

# 1. 42" Module

No	Item	Specification	Remark
1	Display Screen Device	42 inch Wide Color Display Module	PDP
2	Aspect Ratio	16:9	
3	PDP Module	PDP42G1####,	
		RGB Closed Type, Glass Filter	
4	Operating Environment	1)Temp. : 0~40deg	LGE SPEC.
		2)Humidity : 20~80%	
5	Storage Environment	3)Temp. : -20~60deg	
		4)Humidity : 10~90%	
6	Input Voltage	100-240V~, 50/60Hz	Maker LG

#### 2. 50" XGA Module

No	Item	Specification	Remark
1	Display Screen Device	50 inch Wide Color Display Module	PDP
2	Aspect Ratio	16:9	
3	PDP Module	PDP50PG1####,	
		RGB Closed Type, Glass Filter	
4	Operating Environment	1)Temp. : 0~40deg	LGE SPEC.
		2)Humidity : 20~80%	
5	Storage Environment	3)Temp. : -20~60deg	
		4)Humidity : 10~90%	
6	Input Voltage	100-240V~, 50/60Hz	Maker LG

#### 3. 50" FHD Module

No	ltem	Specification	Remark
1	Display Screen Device	50 inch Wide Color Display Module	PDP
2	Aspect Ratio	16:9	
3	PDP Module	PDP50H2####,	
		RGB Closed Type, Glass Filter	
4	Operating Environment	1)Temp. : 0~40deg	LGE SPEC.
		2)Humidity : 20~80%	
5	Storage Environment	3)Temp. : -20~60deg	
		4)Humidity : 10~90%	
6	Input Voltage	100-240V~, 50/60Hz	Maker LG

# ∨ Model General Specification

No	Item	Specification	Remark
1	Market	France	
2	Broadcasting system	1) PAL-BG	
		2) PAL-DK	
		3) PAL-I,I'	
		4) DVB-T(ID TV)	
		5) SECAM-L/L'	
3	Receiving system	Analog : Upper Heterodyne	
		Digital : COFDM	
4	Scart Jack (2EA)	PAL, SECAM	
5	5 Video Input (1EA) PAL, SECAM, NTSC		4 System : PAL, SECAM, NTSC, PAL60
6	S-Video Input (1EA)	PAL, SECAM, NTSC	4 System : PAL, SECAM, NTSC, PAL60
7	Component Input (1EA)	Y/Cb/Cr, Y/Pb/Pr	
8	RGB Input(1EA)	RGB-PC	
9	HDMI Input(4EA)	HDMI-DTV & SOUND	
10	Audio Input (3EA	PC Audio, Component, AV	L/R Input

# ADJUSTMENT INSTRUCTION

# 1. Application Object

These instructions are applied all of the PLASMA TV, PD82A Chassis.

#### 2. Note

- (1) Because this is not a hot chassis, it is not necessary to use an isolation transformer. However, the use of isolation transformer will help protect test instrument.
- (2) Adjustment must be done in the correct order.
- (3) The adjustment must be performed in the circumstance of 25±5°C of temperature and 65±10% of relative humidity if there is no specific designation.
- (4) The input voltage of the receiver must keep 100-240V~, 50/60Hz.
- (5) The receiver must be operated for about 5 minutes prior to the adjustment.
- After RGB Full white HEAT-RUN Mode, the receiver must be operated prior to adjustment.
- o Enter into HEAT-RUN MODE
  - 1) Press the POWER ON KEY on R/C for adjustment.
  - 2) OSD display and screen display PATTERN MODE.
- \* Set is activated HEAT-RUN without signal generator in this mode.
- \* Single color pattern(RED/BLUE/GREEN) of HEAT-RUN mode uses to check PANEL.

If you turn on a still screen more than 20 minutes, (Especially digital pattern, cross hatch pattern) after image may be occur in the black level part of the screen.

# 3. ADC Calibration

\* Using 'power on' button off the control R/C, power on TV.

#### ∨ Auto adjustment Map(RS-232C)

· / late adjactiment map (i.to 2020)						
NO	Item	CMD1	CMD2	Da	ta 0	Remark
ADC adjust	ADC adjust	Α	D	1	0	
Data Read	ADC Parameter	Α	D	2	0	Transfer 18Byte
	Digital Data	Α	D	3	0	(Input resolution Data)
Default Write	ADC Parameter	Α	D	4	0	
	(Average)					
	Adjustment	Α	D	9	0	To check ADC Adjusment
	Confirmation					on Assembly line
Enter	Adjust Mode In	Α	D	0	0	When transger the 'Mode
Adjust Mode						In', Carry the command.
	Adjust Mode Off	Α	D	9	0	

- Baud: 115200bps, RS232 Host: PC, Echo: none.

ADC	AV		Component	RGB-PC
	PAL			
	INPUT SELECT	AV3	Model:215(720P)	Model: 3
MSPG925FS	Model : 202		Pattern : 65	(1024*768 60Hz)
	(PAL-BG	DHI)	* 720P/50Hz	Pattern : 65
	Pattern : 65	;	7 Color Bar	7 Color Bar
	* PAL 7 Color	Bar		

# 4. Adjustment of AV Color Balance

#### 4-1. Standard Equipment

: 802F Pattern Generatorr. Master Pattern Generator(MSPG-925, etc) or same product.

#### 4-2. Required Equipment

- o Remote controller for adjustment.
- MSPG-925FS Pattern Generator. (Which has Video Signal: 7 Color Bar Pattern shown in Fig.1)
  - -> Model: 202 / Pattern: 65 EC and FC model use PAL-BGDHI(composite signal)
- (1) Input the Video Signal: 7 Color Bar signal into AV3.
- (2) Set the PSM to Dynamic mode in the Picture menu.



(Fig.1) 7 color Bar signal

- (3) Press IN-START key on R/C for adjustment.
- (4) Press the G(Vol. +) key to operate the set, then it becomes automatically.

# 5. Adjustment of Component

#### 5-1. Standard Equipment

: 802F Pattern Generatorr. Master Pattern Generator(MSPG-925, etc) or same product.

#### 5-2. Required Equipment

- o Remote controller for adjustment.
- MSPG-925FS Pattern Generator. (Which has Video Signal: 7 Color Bar Pattern shown in Fig.2)
  - -> Model: **202** / Pattern: **65** EC and FC model use PAL-BGDHI(composite signal)
- (1) Input the Component 720p/50Hz 7 color Bar Pattern(MSPG-925FS model : 215, Pattern : 65) signal into Component.
- (2) Set the PSM to Dynamic mode in the Picture menu.



(Fig.2) 7 color Bar signal

- (3) Press **IN-START** key on R/C for adjustment.
- (4) Press the G(Vol. +) key to operate the set, then it becomes automatically.
- (5) Auto-RGB OK means the adjustment is completed.


# 6. Adjustment of RGB

# 6-1. Standard Equipment

: 802F Pattern Generatorr. Master Pattern Generator(MSPG-925, etc) or same product.

# 6-2. Required Equipment

- o Remote controller for adjustment.
- MSPG-925FS Pattern Generator. (Which has Video Signal: 7 Color Bar Pattern shown in Fig.3)
- Input the PC 1024x768@60Hz 7color Bar(MSPG-925, Model:3, Pattern:65) into RGB.(using D-sub to D-sub cable)
- (2) Set the PSM to Dynamic mode in the Picture menu.

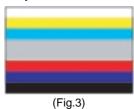

- (3) Press IN-START key on R/C for adjustment.
- (4) Press the G(Vol. +) key to operate To set, then it becomes automatically.
- (5) Auto-RGB OK means the adjustment is completed.
- (6) Press the G(Vol. +) key to operate the set, then it becomes automatically.
- (7) Auto-RGB OK means the adjustment is completed.

# 7. Channel memory Setting Method

- : Recovery the channel memory by adjust R/C.
- 1) Press ADJ key on R/C for adjustment.
- 2) Press VOL + key on "Channel Recover".

# 8. PCMCIA CARD Checking Method

- : You must adjust DTV 29 Channel and insert PCMCIA CARD to socket.
- If PCMCIA CARD works normally, normal signals display on screen. But it works abnormally, "No CA module" words display on screen.
- \* Befor power off, input mode must be changed RF mode.

Each PCB assembly must be checked by check JIG set. (Because power PCB Assembly damages to PDP Module, especially be careful)

# 9. POWER PCB Assy Voltage Adjustments (Va, Vs Voltage adjustments)

#### 9-1. Test Equipment: D.M.M. 1EA

# 9-2.Connection Diagram for Measuring : refer to Fig.4


# 9-3. Adjustment Method

# (1) Va Adjustment

- 1) After receiving 100% Full White Pattern, HEAT RUN.
- 2) Connect + terminal of D.M.M to Va pin of P811, connect terminal to GND pin of P811.
- After turning RV901, voltage of D.M.M adjustment as same as Va voltage which on label of panel right/top. (Deviation; ±0.5V)

#### (2) Vs Adjustment

- 1) Input signal: RF noise signal.
- 2) Connect + terminal of D.M.M to Vs pin of P811, connect terminal to GND pin of P811.
- After turning RV951, voltage of D.M.M adjustment as same as Va voltage which on label of panel right/top. (Deviation; ±0.5V)

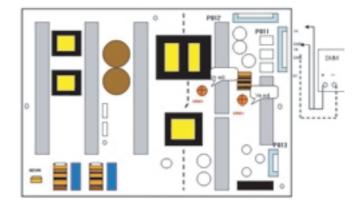

(Fig.4) Connection diagram of power adjustment for measuring


-8-

# 8. EDID(The Extended Display Identification Data ) /DDC(Display Data Channel) download

#### 8-1. Required Test Equipment

- (1) Adjusting PC with S/W for writing EDID Data.
- (S/W : EDID TESTER Ver.2.5)
- (2) A Jig for EDID Download.
- (3) Cable: Serial(9Pin or USB) to D-sub 15Pin cable, D-sub 15Pin cable, DVI to HDMI cable.

# 8-2. Required Test Equipment

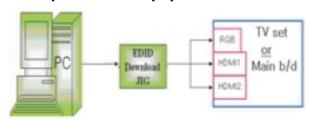

(Fig.5) Connection Diagram of DDC download

#### 8-3. Preparation for Adjustment

- As above Fig.5, Connect the Set, EDID Download Jig, PC & Cable.
- 2) Turn on the PC & EDID Download Jig. And Execute the S/W: EDID TESTER Ver,2.5.
- 3) Set up S/W option. Repeat Number: 5 Device Address: A0 PageByte: 8

Model DF SSA011022 FIGB ANA(Anolog). MFDSEA011022 FIG
MODEL DF SSA011022 FIGB ANA(Anolog). MFDSEA011022 FIGB ANA(Anolog). MFDSEA011

4) Power on the Set.

# 8-4. Sequence of Adjustment

- (1) EDID Download
  - 1) Init the data.




2) Load the EDID data.(Open File).



[ Analog file ] (for RGB)] [ Digital file ] (for HDMI)

- 3) Set the S/W as below.
- 4) Push the "Write Data & Verify" button. And confirm "Yes".
- 5) If the writing is finished, you will see the "OK" message.

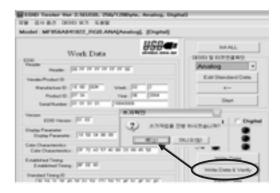

If TV has two HDMI, you must download two times for each HDMI.

#### 8-5. EDID DATA

1) Analog-RGB.



=> Detail EDID Options are below([1],[2],[3],[4],[5])

#### 1.[1]-Product ID

Model Name	Product ID	Pi	roduct ID
Woder Name	1 TOUGET ID	Hex	EDID table
50PG6500	40013	9CB1	B19C

2. [2]-Serial No: Controlled on production line.

 ${\it 3.}\ [{\it 3}]\mbox{-Month, Year}: Controlled on production line.$ 


ex) Monthly: '03' => '03' Year : '2006' => '10'

4. [4]-Model Name: model name.

Model Name	Model Name(Hex)				
50PG6500	00 00 00 FC 00 35 30 50 47 36 35 30 30 0A 20 20 20 20				

5. [5]-Checksum (7EH) -> Changeable by total EDID data.

#### 2) HDMI 1.

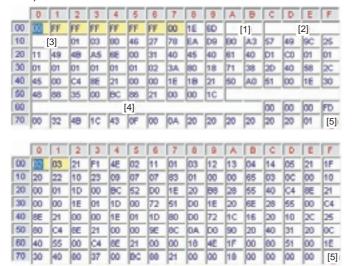

=> Detail EDID Options are below([1],[2],[3],[4],[5])

#### 1.[1]-Product ID

Model Name	Product ID	Product ID	
Woder Name	Floductib	Hex	EDID table
50PG6500	40114	9CB2	B29C

- 2. [2]-Serial No: Controlled on production line.
- 3. [3]-Month, Year: Controlled on production line.

ex) Monthly: '03' => '03' Year : '2006' => '10'

4. [4]-Model Name: model name.

Model Name	Model Name(Hex)
50PG6500	00 00 00 FC 00 35 30 50 47 36 35 30 30 0A 20 20 20 20

5. [5]-Checksum (7EH) -> Changeable by total EDID data.

#### 3) HDMI 2.



- => Detail EDID Options are below([1],[2],[3],[4],[5])
- \* Please refer HDMI 1
- EDID Download is needed HDMI 1~ HDMI 4.

\* Befor adjusting White-balance, the AV ADC should be done. If ADC status were "NG", Need to ADC adjustment.

# 9. Adjustment of White Balance

# 9-1. Required Equipment

- (1) Remote control for adjustment.
- (2) Color Analyzer: CA-100+, CA210 or same product.

- CH: 10

- (3) Auto W/B adjustment instrument.(only for Auto adjustment)
- (4) AV Pattern Generator.
- W Color temperature standards according to CSM and Module.

CSM	PLASMA	Remark
Cool	11000K	
Normal	9300K	
Warm	6500K	


W CS-1000/CA-100+/CA-210(CH 10) White balance adjustment coordinate and color temperature.

CSM	Color Co	oordinate	Temp	∆uv	
COIVI	Х	у	Temp		
COOL	0.276±0.002	0.283±0.002	11,000K	0.000	
MEDIUM	0.285±0.002	0.293±0.002	9,300K	0.000	
WARM	0.313±0.002	0.329±0.002	6,500K	0.003	

\* PC(for communication through RS-232C) -> UART Baud rate : 115200 bps

# 9-2. Connection Picture of the Measuring Instrument(On Automatic control)

(1) Inside PATTERN is used when W/B is controlled. Connect to auto controller or push control R/C IN-START -> Enter the mode of White-Balance, the pattern will come out.

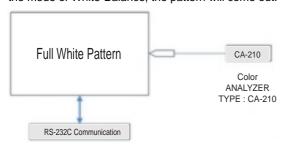

(Fig.6) Auto AV(CVBS) Color Balance Test Pattern

# 9-3. Auto-control interface and directions

- (1) Adjust in the place where the influx of light like floodlight around is blocked.(illumination is less than 10ux)
- (2) Measure and adjust after sticking the Color Analyzer(CA-100+, CA210) to the side of the module.
- (3) Aging time
  - After ajing start, keep the power on(no suspension of power supply) and heat-run over 15minutes.
  - keep white pattern using inside pattern.

∨ Auto adjustment Map(RS-232C)

Type Baud Rate		PD82A					
		Data bit		Stop bit		Parity	
118	5200	8		1		NONE	
	Index	Cmd1	Cmd2	Data	Min Value	Max Value	
	R Gain	j	а		00(00)	128(80)	
Protocol Setting	G Gain	j	b		00(00)	128(80)	
	B Gain	j	С		00(00)	128(80)	
	R Offset	j	d		00(00)	128(80)	
	G Offset	j	е		00(00)	128(80)	
	B Offset	j	f		00(00)	128(80)	

# 10. Adjustment of White Balance

(Manual white Balance)

- V One of R Gain/ G Gain/ B Gain should be kept on 80, and others are controlled lowering from 80
- (1) Press 'power on' of the control R/C, set heat run to white by pressing and heat run over 15 minutes.(Set: RS-232 Host: PC, Baud Rate: 115200bps, Download: Cortez)
- (2) Zero Calibrate CA-100+, and stick the sensor to the center of PDP module surface when you adjust.
- (3) Double click In-start key on Controlling R/C and get in 'white balance'.
- (4) Set test-pattern on and display inside pattern. Control is carried out on three color temperature, COOL, MEDIUM, WARM. (Control is carried out three times.)
- (5) When the R/G/B GAIN is 80 on OSD, it is the FULL DYNAMIC Range of the Module. In order to control white balance without the saturation of FULL DYNAMIC Range and DATA, one of R Gain / G Gain / B Gain should be kept on 80, and other two is controlled lowering from 80.
- \* Color Temperature: Cool, Medium, Warm
  - (1) When R GAIN is set to 80
  - Control G GAIN and B GAIN by lowering from 80.
  - (2) When B GAIN is set to 80
  - Control R GAIN and G GAIN by lowering from 80.
  - (3) When G GAIN is set to 80
  - Control R GAIN and B GAIN by lowering from 80.
     One of R Gain / G Gain / B Gain should be kept on 80, and adjust other two lower than 80.

(When R/G/B GAIN are all 80, it is the FULL DYNAMIC Range of Module)

# 11. Input the Shipping Option Data


- 1) Push the IN-START key in a Adjust Remocon.
- 2) Input the Option Number that was specified in the BOM, into the Shipping area.
- 3) The work is finished, Push ∨ Key.

# 12. Default Value in Adjustment mode

#### 12-1. Auto Color Balance


<Component>

<RGB>

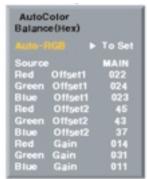



<AV>

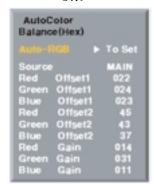

(Fig. 7) Default on OSD

#### 12-2. Write Balance

WI	nite Balano	e(nex)
		80
Green	Gain	80
Blue	Gain	80
Red	Offset	80
Green	Offset	80
Blue	Offset80	
Reset	P 1	To Set

(Fig. 8) Default on OSD

# 13. EEPROM Data Write(Serial No D/L)

# 13-1. Signal TABLE

|--|

CMD : A0h

LENGTH: 85~94h (1~16 bytes)

ADH : E<sup>2</sup>PROM Sub Address high (00~1F) ADL : E<sup>2</sup>PROM Sub Address low (00~FF)

Data : Write data

CS : CMD + LENGTH + ADH + ADL + Data 1 + ... + Data n

Delay : 20ms

#### 13-2. Command Set

No	Adjust mode	CMD(hex)	LENGTH(hex)	Description
1	EEPROM WRITE	A0h	84h+n	n-byted Write
				(n=1~16)

<sup>\*</sup> Description

FOS Default write : <7mode data> write

Vtotal, V\_Frequency, Sync\_Polarity, Htotal, Hstart, Vstart, 0, Phase Data write: Model Name and Serial Number write in EEPROM,.

#### 13-3. Method & Notice

- (1) Serial number D/L is using of scan equipment.
- (2) Setting of scan equipment operated by Manufacturing Technology Group.
- (3) Serial number D/L must be conformed when it is produced in production line, because serial number D/L is mandatory by D-book 4.0.

# 14. Set Information (Serial No& Model name, Option Table)

# 14-1. Setting up 'Tool Option1,2' (After setting white balance, this is set)

(Setting: Press ADJ Key in the Adjust remocon)

- (1) Press ADJ Key in the R/C for adjustment.
- (2) Insert Option value by a number key.
- (3) Press the Enter Button.

Model Name	Tool Option1	Tool Option2	Area Option	Option1	Option2	Option3	Option4
42PG6500	10240	1697	0	14	2	1	192

# 14-2. Check the serial number & Model Name

- (1) Push the menu button in DTV mode.
  - Select the STATION-> Diagno stics -> To set.




(2) Check the Serial Number.



# TROUBLE SHOOTING GUIDE


#### 1. Power Board

# 1-1. The whole flowchart which it follows in voltage output state

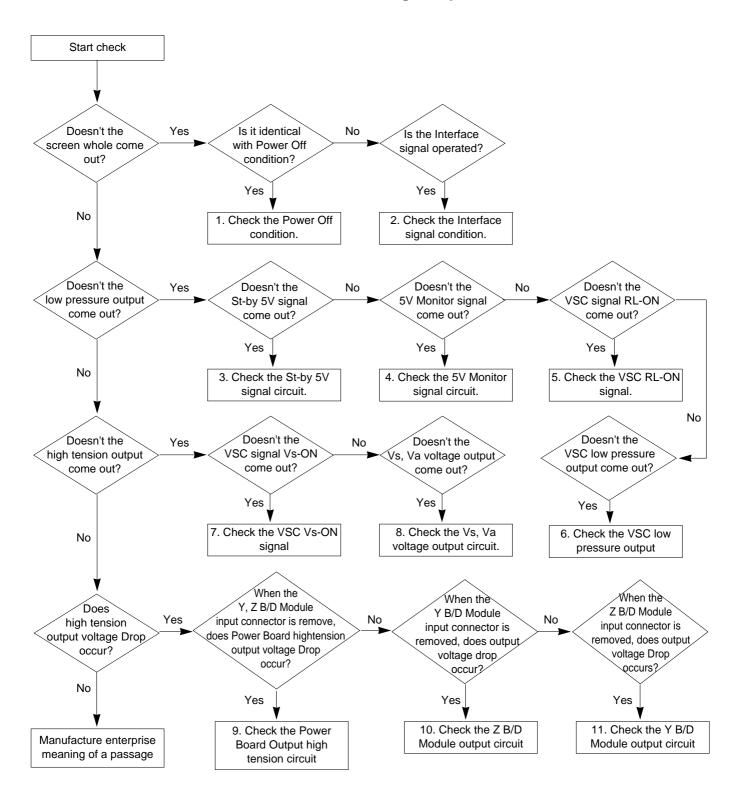

# 1-2. 50" Power Board Structure

# (1) Pin Layout

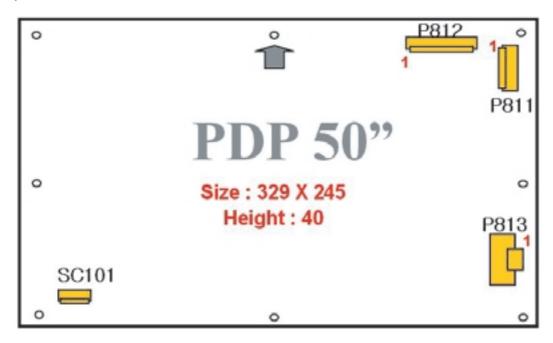


# (2) Pin Spec


NO	AC INLET	MAIN BOARD	PDP M	IODULE
NO	SC101	P813	P811	P812
1	AC	16V	Vs	Vs
2	NC	GND	Vs	Vs
3	AC	12V	NC	NC
4		GND	GND	GND
5		5VSC	GND	GND
6		5VSC	Va	Va
7		GND	Va	Va
8		GND	GND	GND
9		5V_MNT	M5V	M5V
10		RL_ON	M5V	M5V
11		M5V_ON		
12		M5V_ON		
13		GND		
14		GND		
15		GND		
16		GND		
17		5V_MNT		
18		AC_DET		
19		RL_ON		
20		VS_ON		
21		M5V_ON		
22		AUTO_GND		
Description	YH396-03	SMH200-22P	YH396-10P	YH396-10P

# 2. No Power

#### (1) Symptom

- 1) Doesn't minute discharge at module.
- 2) Non does not come in into the front LED.

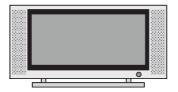


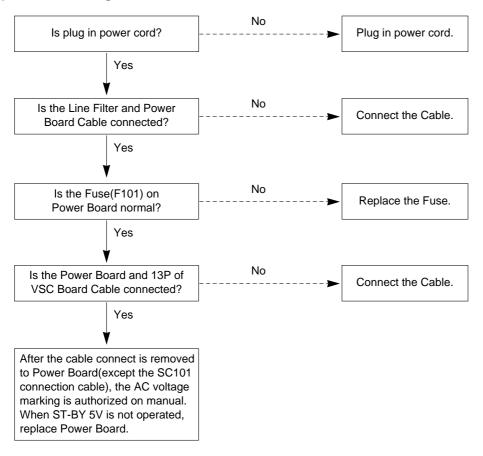


#### 3. Protect Mode

#### (1) Symptom

- After once shining, it does not discharge minutely from module.
- 2) The Rely falls.(The sound is audible "click")
- 3) It is converted with the color where the front LED is red from green.

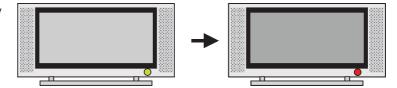


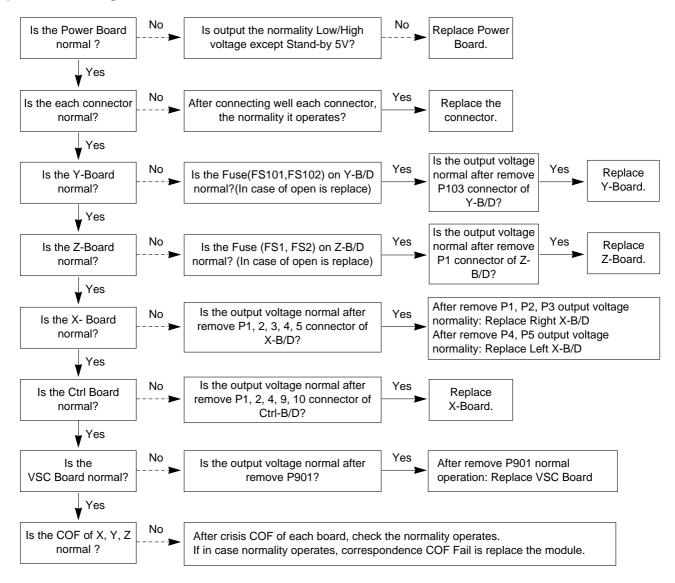


# 4. No Raster

# (1) Symptom

- 1) No OSD and image occur at screen.
- 2) It maintains the condition where the front LED is green.

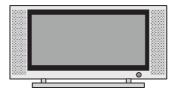

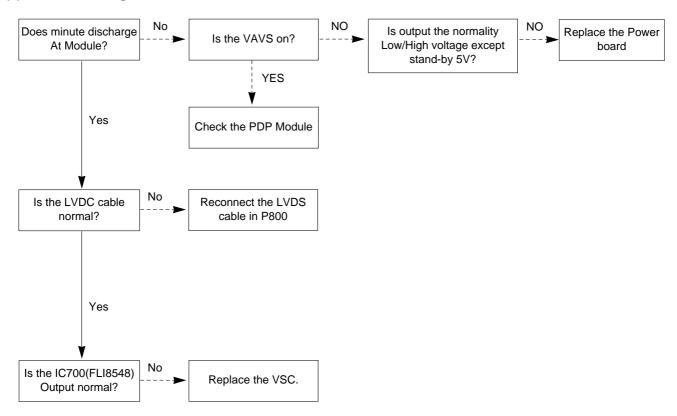



# 5. In case of occurring strange screen into specific mode

# 5-1. In case the OSD does not displayed

#### (1) Symptom

- 1) LED is green.
- 2) The minute discharged continuously becomes Accomplished from module.

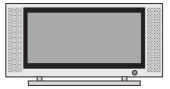

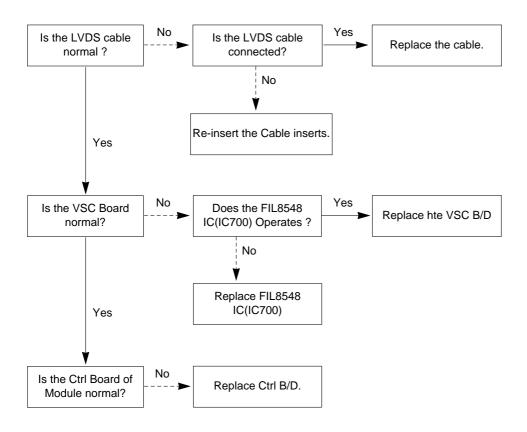

# 5-2. In case of does't display the screen into specific mode

#### (1) Symptom


1) The screen does not become the display from specific input mode (RF, AV, Component, RGB, DVI).




#### (2) Check following

1) Check the all input mode should become normality display.


#### (3) In case of becomes unusual display from RF mode

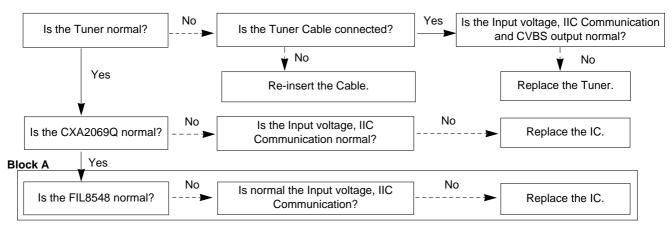


#### (4) In the case of becomes unusual display from side S-video/AV mode

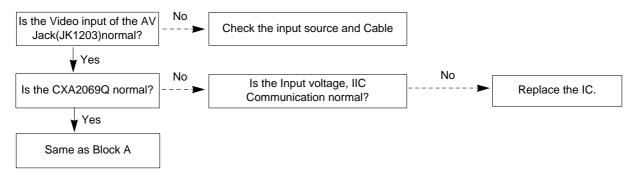


# (5) In the case of becomes unusual display from Component, RGB mode

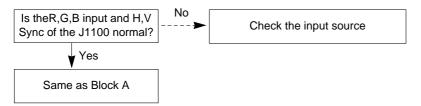


#### (6) In the case of becomes unusual display from HDMI mode

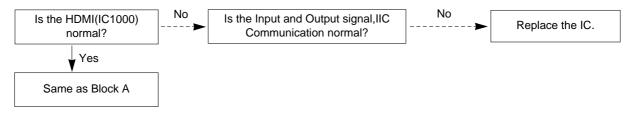

#### (7) In the case of becomes unusual display from SCART1 mode

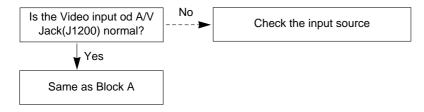

#### (8) In the case of becomes unusual display from SCART2 mode

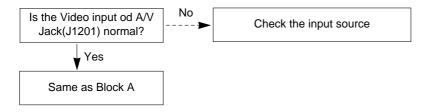


# 6. In case of no sound


#### (1) Symptom


- 1) LED is Green.
- 2) Screen display but sound is not output.



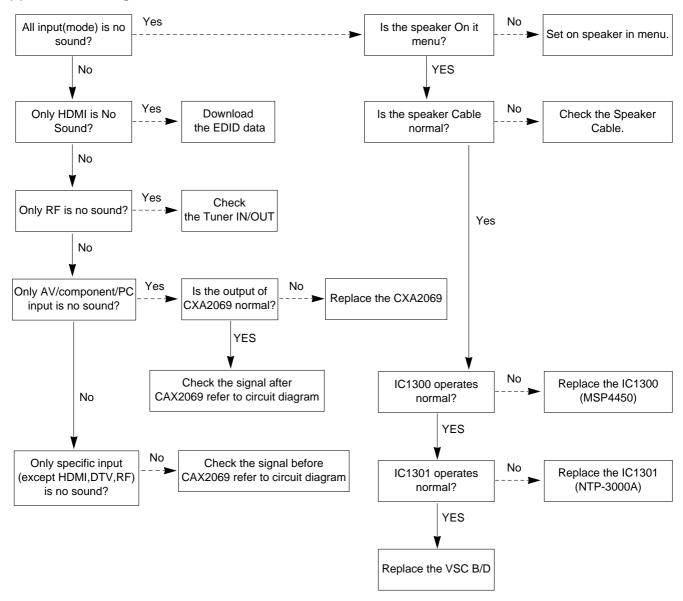

# **BLOCK DIAGRAM**

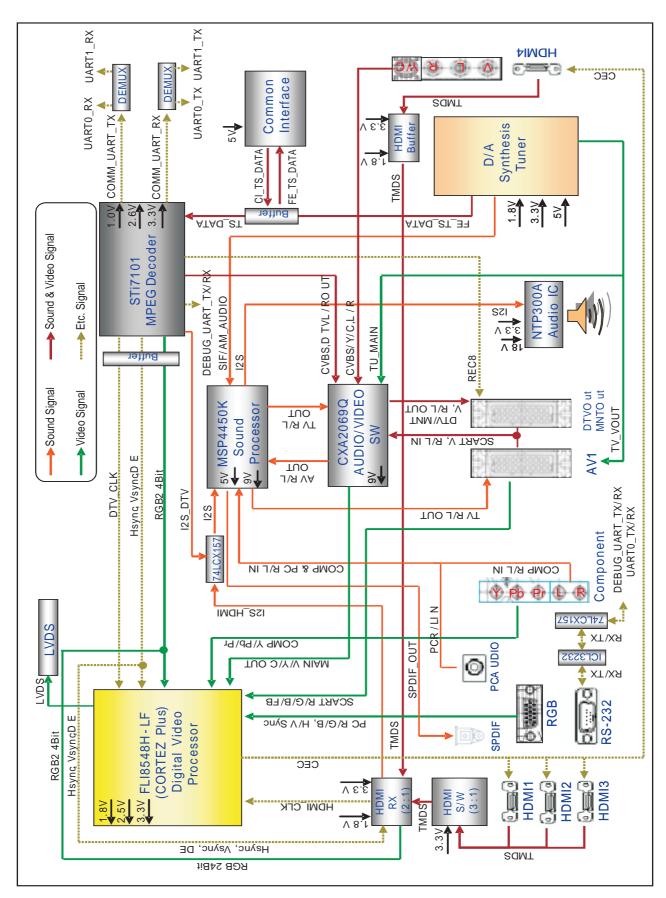

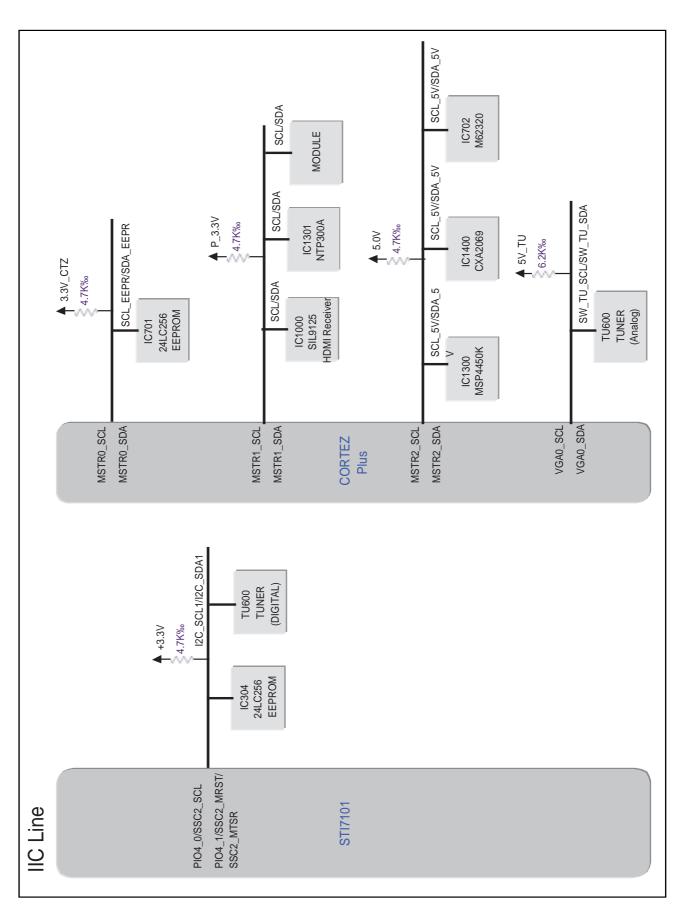



# **EXPLODED VIEW**


#### IMPORTANT SAFETY NOTICE


Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by  $\triangle$  in the Schematic Diagram and EXPLODED VIEW. It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards.


Do not modify the original design without permission of manufacturer.

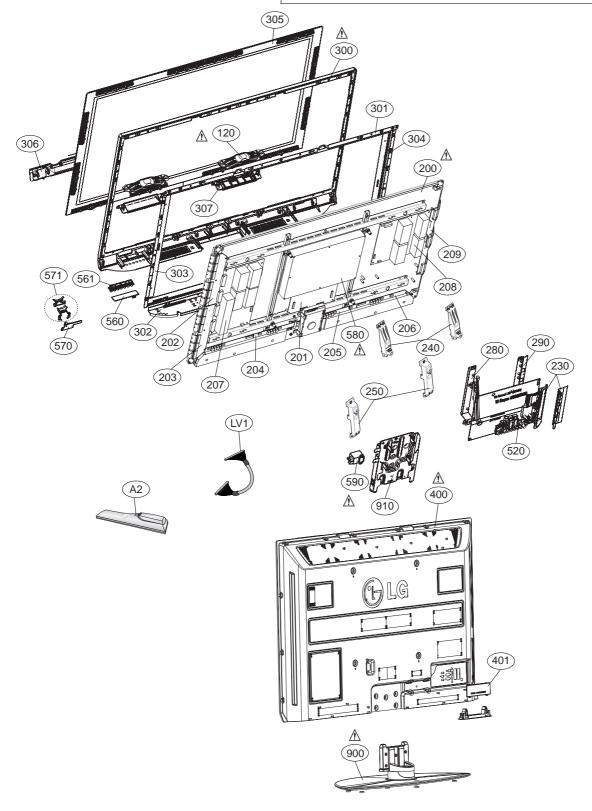


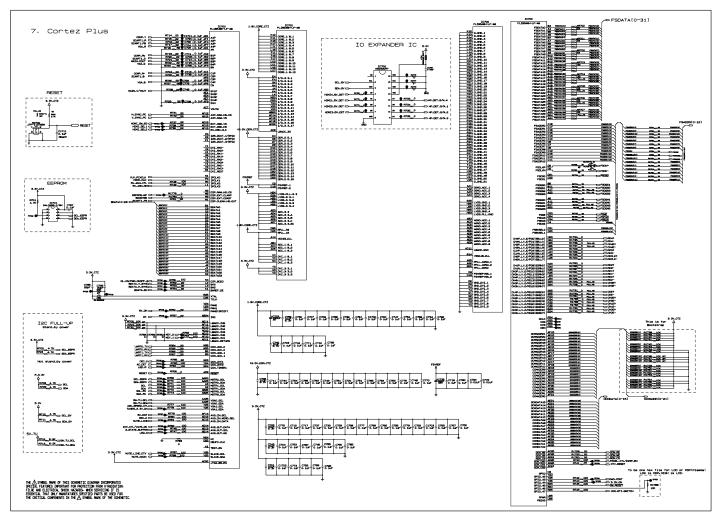


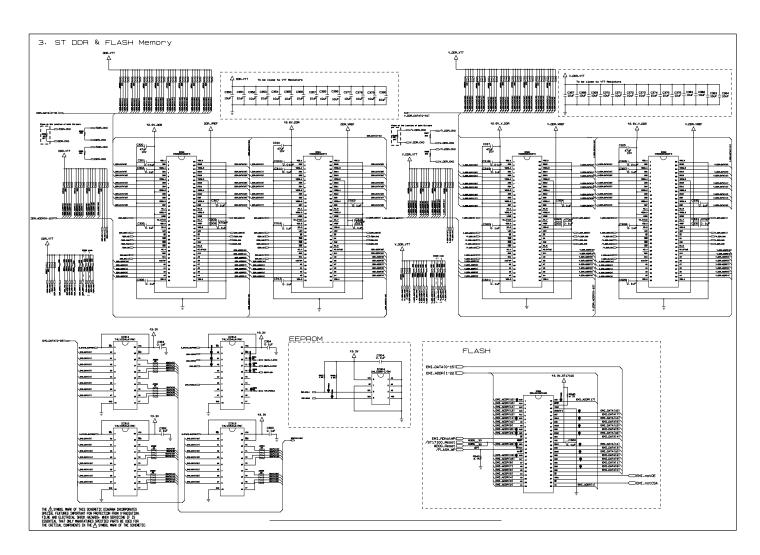


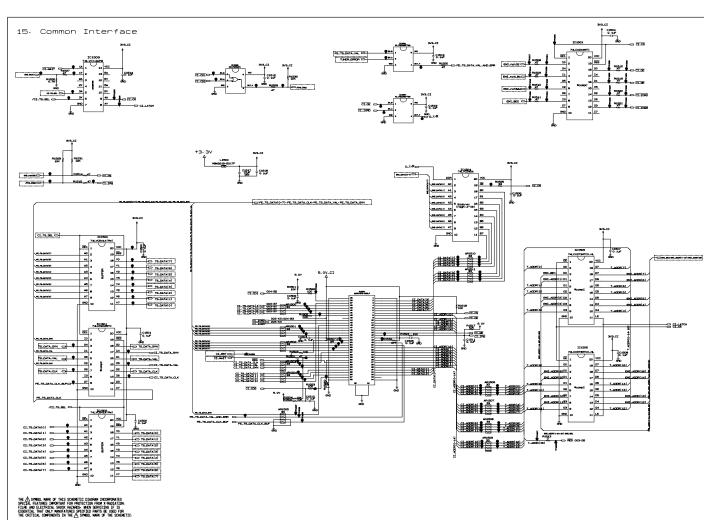


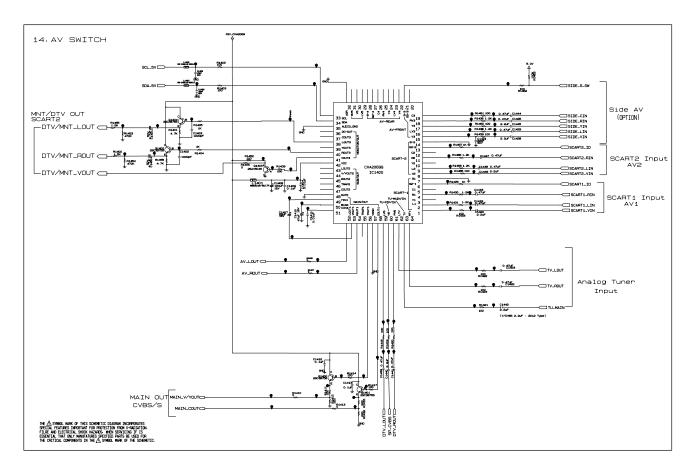


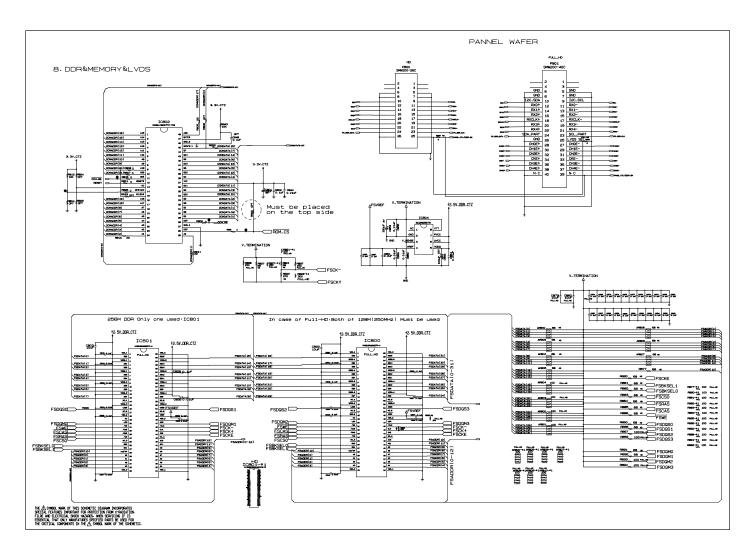


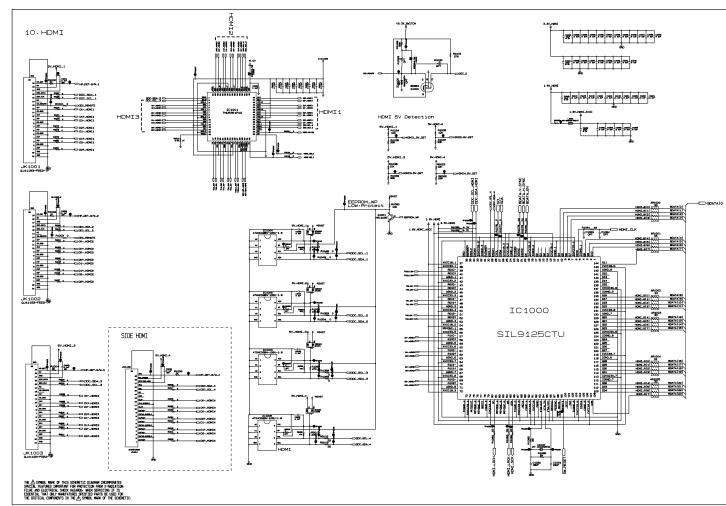


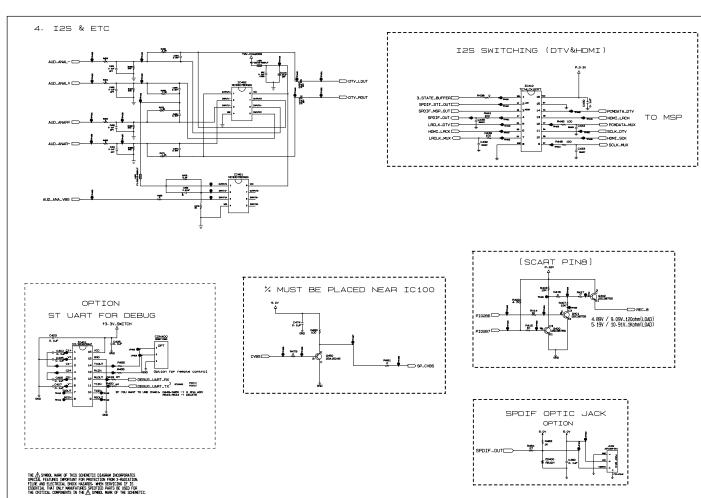


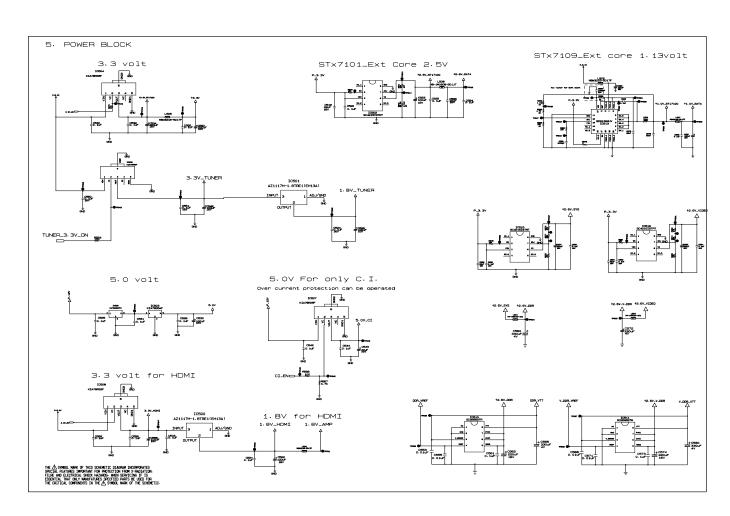


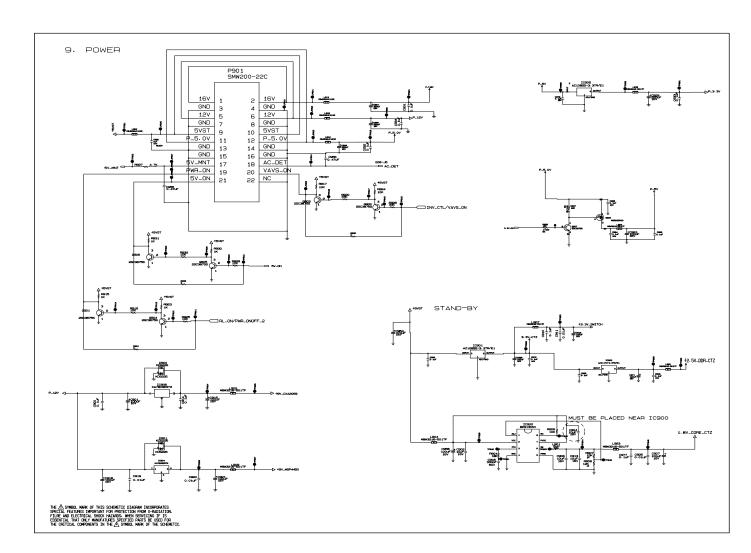


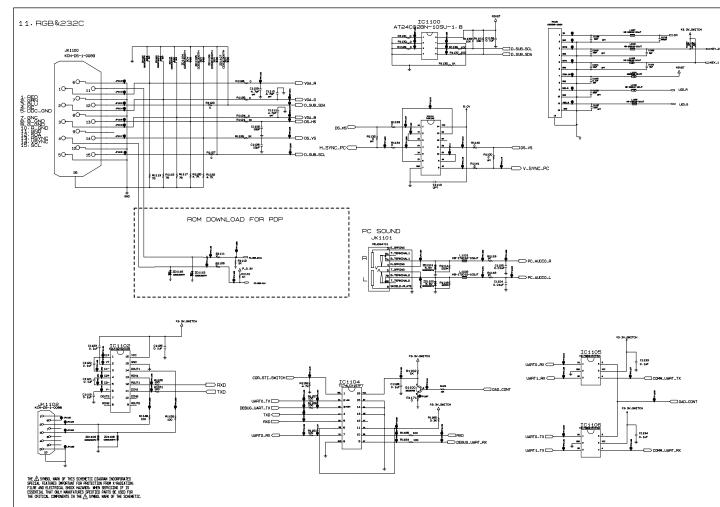


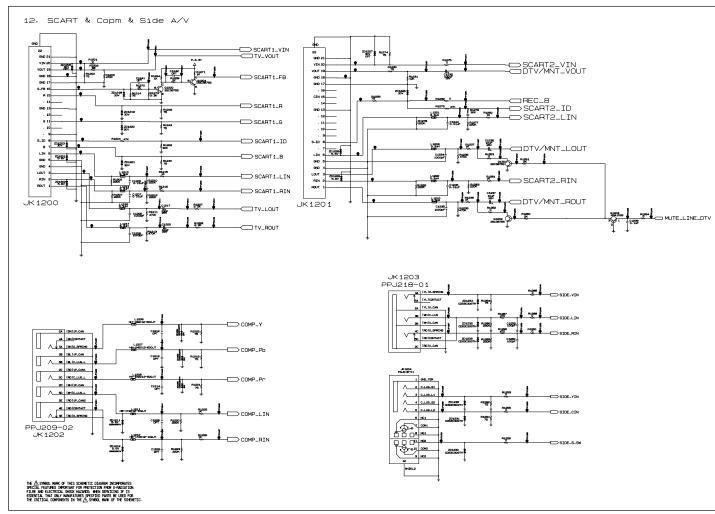

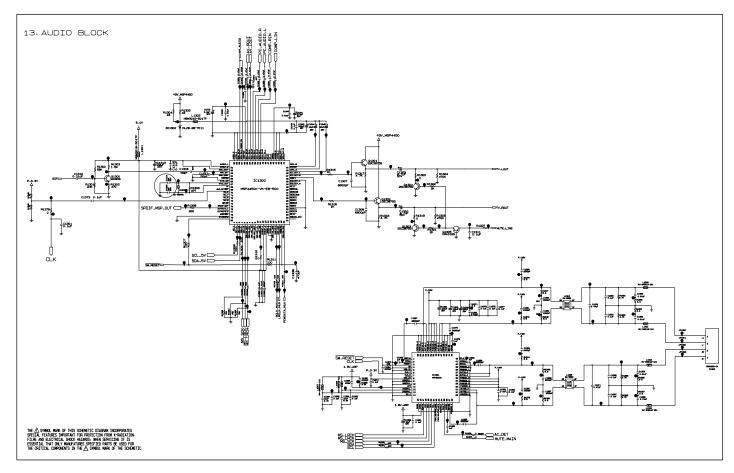

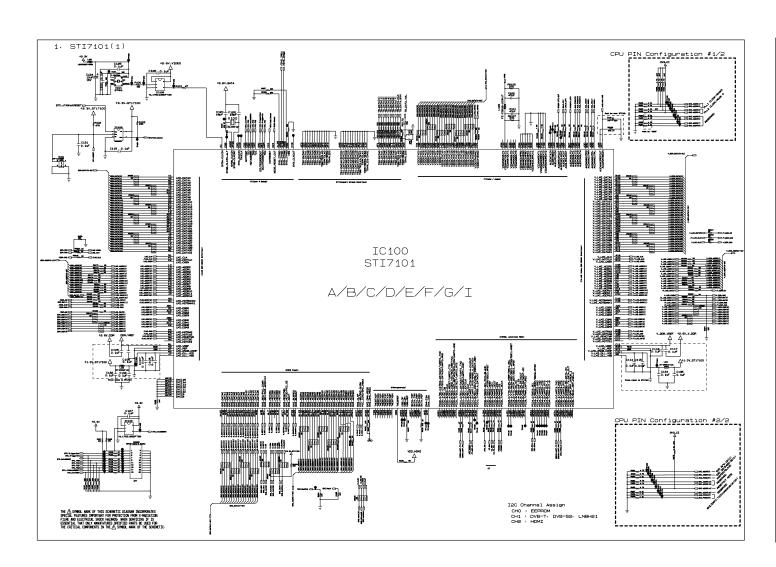

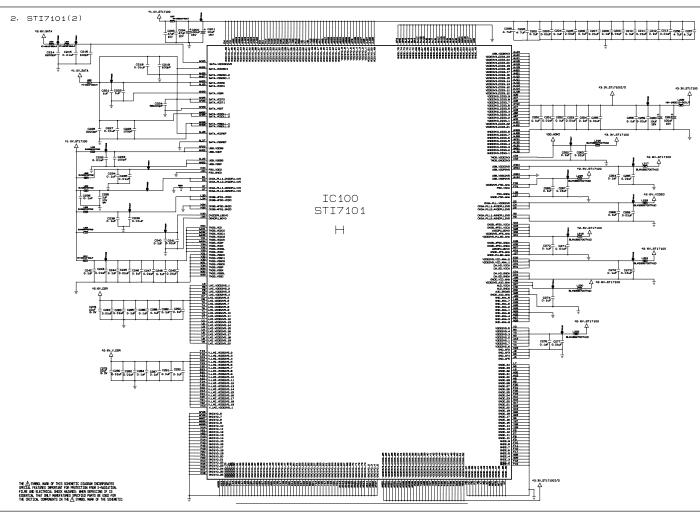


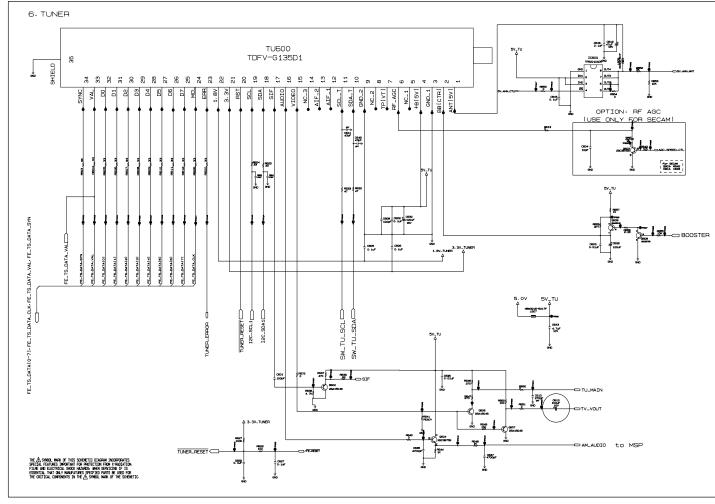


Copyright©2008 LG Electronics. Inc. All right reserved.

Only for training and service purposes


#### MAIN(TOP)

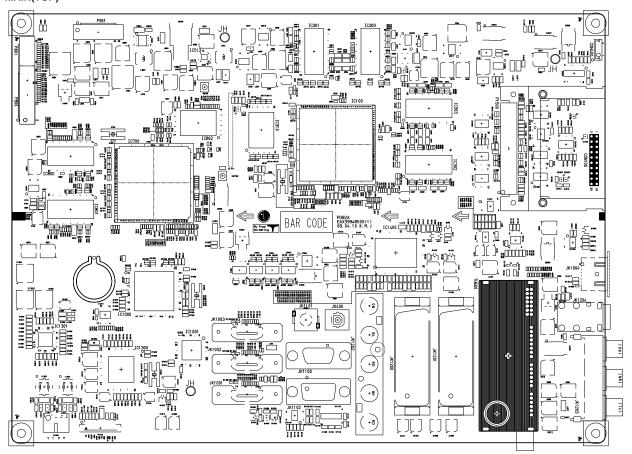

#### MAIN(BOTTOM)

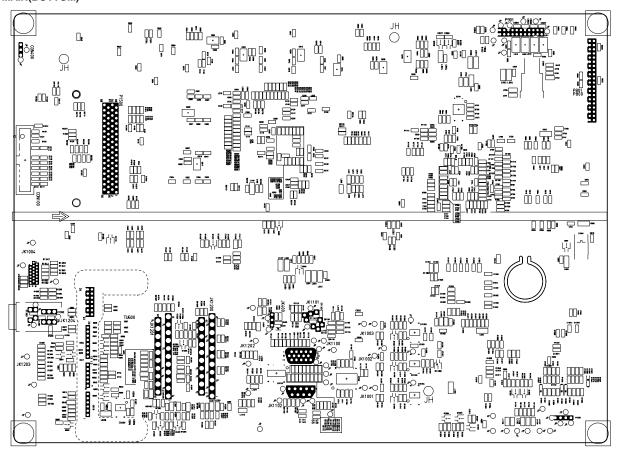


#### CONTROL(TOP) CONTROL(BOTTOM)

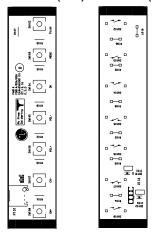

#### PRE AMP(TOP)



#### PRE AMP(BOTTOM)



Copyright®2008 LG Electronics. Inc. All right reserved.
Only for training and service purposes



Sep., 2008 P/NO : MFL41435506 Printed in Korea